


TITAN

1911 Pistol 45 ACP
EXPLODED VIEW

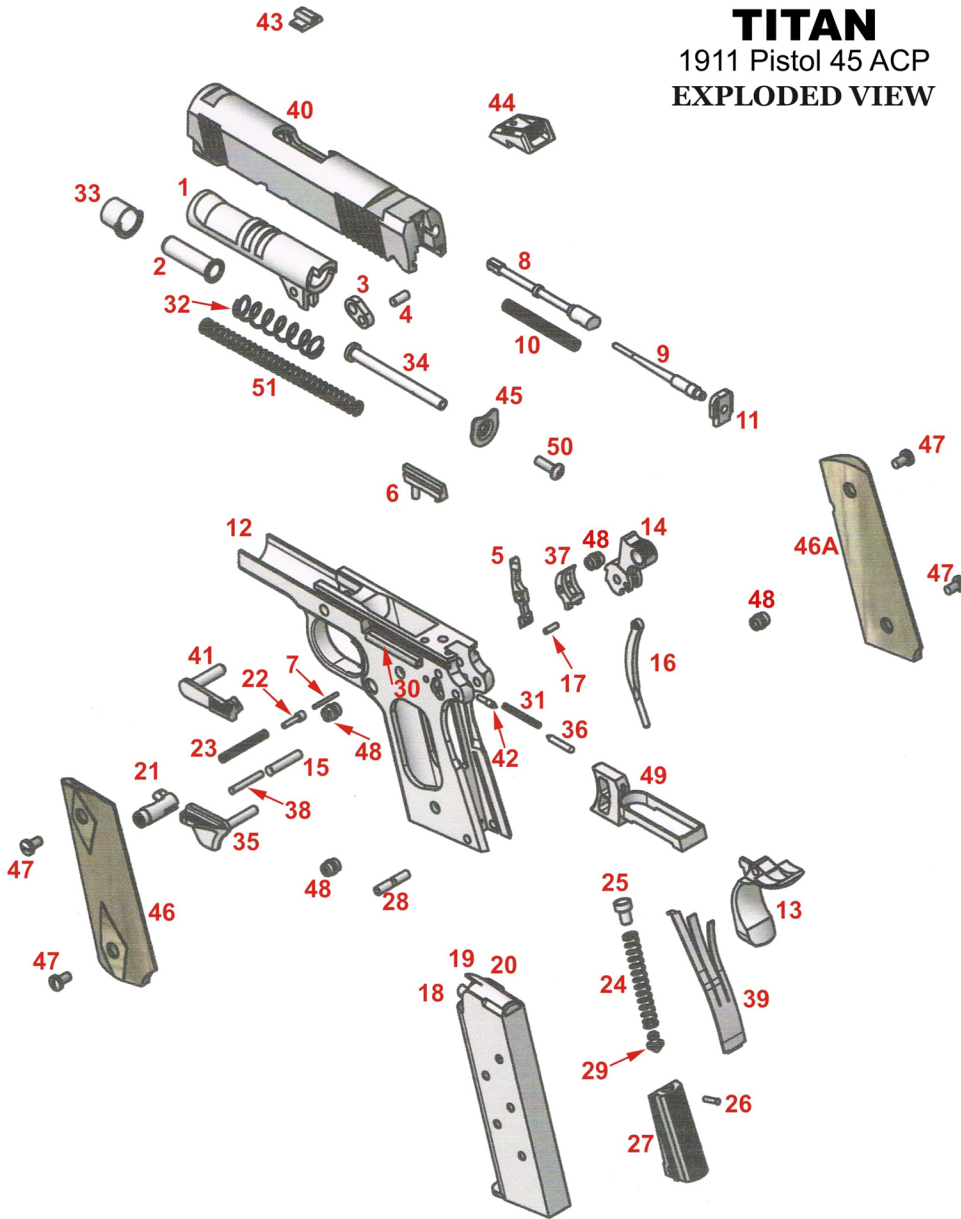

TITAN Parts Name

1. Barrel
2. Secondary Plug
3. Barrel Link
4. Barrel Link Pin
5. Disconnecter
6. Ejector
7. Ejector Pin
8. Extractor
9. Firing Pin
10. Firing Pin Spring
11. Firing Pin Stop
12. Frame
13. Safety Grip, Beavertail
14. Hammer, Round
15. Hammer Pin
16. Hammer Strut
17. Hammer Strut Pin
18. Magazine Assembly
19. Magazine Follower
20. Magazine Spring
21. Magazine Catch
22. Magazine Catch Lock
23. Magazine Catch Spring
24. Main Spring
25. Retainer Cap
26. Follower Housing Pin
27. Main Spring Housing
28. Housing Pin
29. Retainer Guide
30. Plunger Tube
31. Plunger Spring
32. Recoil Spring 1
33. Reverse Plug
34. Recoil Spring Guide
35. Safety Lock
36. Plunger Pin Long
37. Sear
38. Sear Pin
39. Sear Spring
40. Slide
41. Slide Stop
42. Plunger Pin Short
43. Front Sight, Dovetail
44. Rear Sight, Novak
45. Guide Plate
46. Grip
- 46A. Grip
47. Grip Screw Male
48. Grip Screw Female
49. Trigger
50. Guide Plate Screw